



PRINTING TO THE EPSON R2400

pg.1

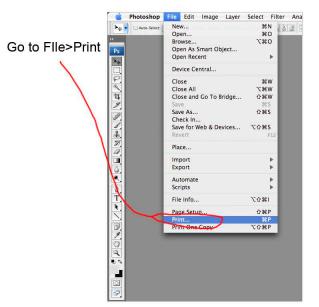


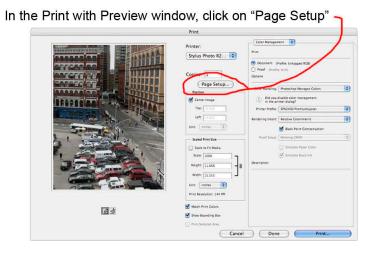

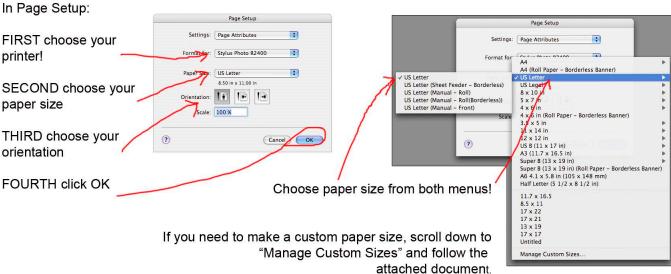

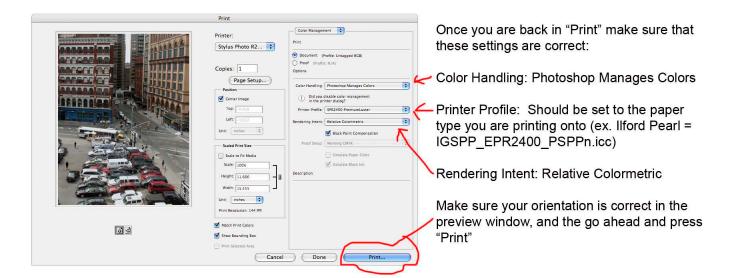

PRINTING THE THE EPSON R2400 pg.2

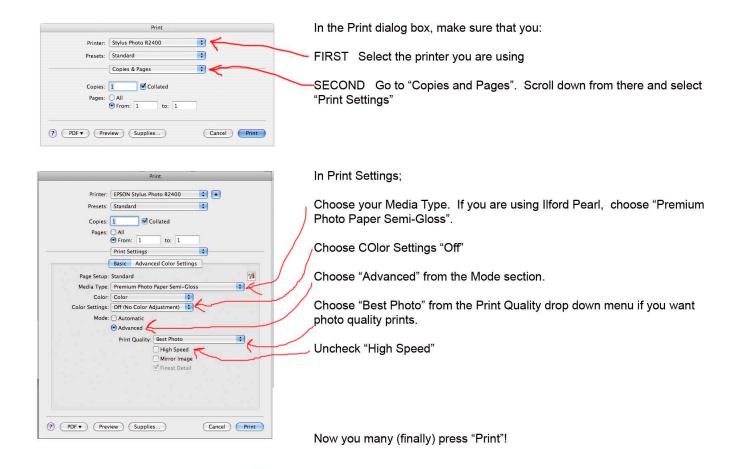

Troubleshooting:

If the printer runs out of ink (the red light is on constantly) ask a technician to change it for you.

If your print comes out magenta, somewhere along the way you have chosen the wrong setting. Go back through these instructions and check you settings.

If the settings are correct and its still magenta, use the document "Eliminating Banding and Cleaning Heads" to clean the heads.

If you are getting lines (banding) through your print, make sure the "Print Quality" is set to "Best Photo". Also, make sure you have chosen the correct "Media Type" in this same dialog box. If these prove not to be the problem, then use the document "Eliminating Banding and Cleaning Heads" to clean the heads. These lines usually mean there is a piece of dust or dried ink stuck on the heads.